ETSINC. SM1-SS-KMS Microphone Instructions

The SM1-SS-KMS is a stainless steel, high quality, 12VDC powered, flush mount, omnidirectional, pre-amplified microphone with for use with DRVs, I/P cameras, etc. The SM1-SS-KMS includes a keyed mute switch and LED indicator for silencing microphone pickup. Note- the audio output of the SM1-SS-KMS is jumper selectable "line level" (0db) or "microphone level" (-30db). The SM1-SS-KMS also includes a mute switch which turns the audio output on or off.

SM1-SS-KMS Microphone Placement.

Locate the SM1-SS-KMS Microphone near the area of interest in the room to be monitored. If the entire room is to be monitored, locate the SM1-SS-KMS in the middle of the room. Do not mount the microphone near air conditioning vents, light fixtures or electrical equipment. The SM1-SS-KMS should be placed at least five feet away from the subject(s) to be monitored. The SM1-SS-KMS is still useable in the range of 15-25 feet but is dependent on the level of background noise in the area. Experimentation in the environment will determine what distances work best.

Cable Run

Run a 22 gauge, stranded, two conductor shielded cable between the SM1-SS-KMS microphone and the monitoring device. Keep the cable run distance under 1,000 feet and away from AC power sources, light fixtures and electrical equipment. Connect power to the + terminal, the audio signal to the "audio" terminal and ground to the – terminal. The Ground of the power and audio signal must share a common ground for proper operation. *See Figure 1 for connection diagram.*

Mounting

The SM1-SS-KMS can be surface or flush mounted on ceilings or walls. For flush mounting, cut a 2" by 2 7/8 " hole in the wall or ceiling tile to allow room for the circuit board and mount the SM1-SS-KMS to the surface with screws. A single gang electrical box can also be used for surface mounting.

Mute Key Switch and LED indicator

When the key switch is placed in the vertical position (microphone hole located at the top), the LED is Green and the microphone output is not muted (on). When the key switch is placed in the horizontal position, the LED lights Red and the output is muted (off).

Adjusting the SM1-SS-KMS Gain


The SM1-SS-KMS output level is set by selecting the desired volume range and adjusting the gain control.

The "Volume Range" jumper should be set to the "LO" position when using the SM1-SS-KMS with I/P cameras that utilize "microphone inputs" also know as "Mic. Level" inputs. This sets the maximum gain of the SM1-SS-KMS's pre-amp to x14. The jumper should be placed in the "HI" position when using I/P cameras with "Line level" inputs of DVRs and I/P cameras. This sets the maximum gain of the SM1-SS-KMS's pre-amp to x196.

The SM1-SS-KMS is shipped with the gain set at midrange. If the sound at the "head end" is distorted, rotate the control towards the – mark (counter-clockwise). If the volume at the "head end" is too low, rotate the control towards the + mark (clockwise).

Setting the SM1-SS-KMS Hi-Cut/Lo-Cut Jumpers

The normal frequency response of the SM1-SS-KMS microphone is 500-13Khz. When both jumpered "in", The "HI Cut" and "Lo Cut" filters set the SM1-SS-KMS's frequency response to 900-6Khz. Enabling one or both of the filters is useful when background noise needs to be further reduced and intelligibility of speech emphasized. We recommend experimenting with the jumper settings to achieve the best acoustic result for your application.

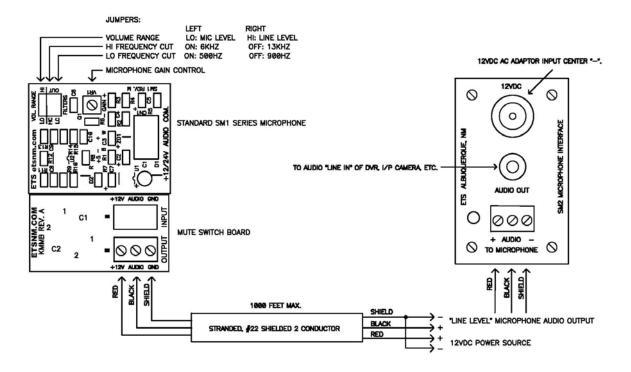

Caution

It may be against the law to install this microphone kit in certain environments. It may also be against the law to record conversations of the person(s) being monitored without their knowledge. It is the responsibility of the installation company and end-user to determine if the application of this product is legal. These laws vary from state to state. If you are not informed on these matters, consult a qualified attorney or contact the appropriate state agency. A sticker is provided with this kit for the applications where notification must be posted.

Warranty

All ETS products carry a one year parts and labor warranty. This warranty does not cover damages as a result of misuse, improper handling of the unit or exposure to extreme temperatures or moisture. At its discretion, ETS reserves the right to repair or replace this unit under the conditions of the warranty. If you experience problems with your equipment call ETS at: 505-888-3923 to obtain a return authorization number. Equipment requiring repair beyond the warranty period or units that have been damaged or are not covered under the warranty can be repaired by ETS for a minimal cost under most conditions.

